

1/2\*

# ZEWNĘTRZNE

EXTERNAL DOORS



T 55


Producent zastrzega sobie prawo do zmian  
w produkcie bez wcześniejszego powiadomienia.

Manufacturer reserves the right to change product without prior notice





!    
03/11/2017

4


A

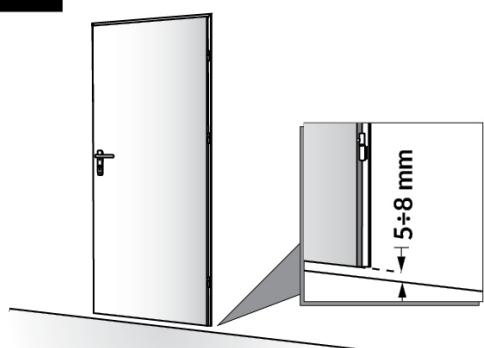


B

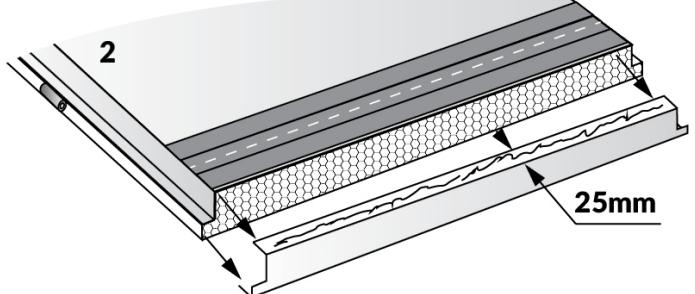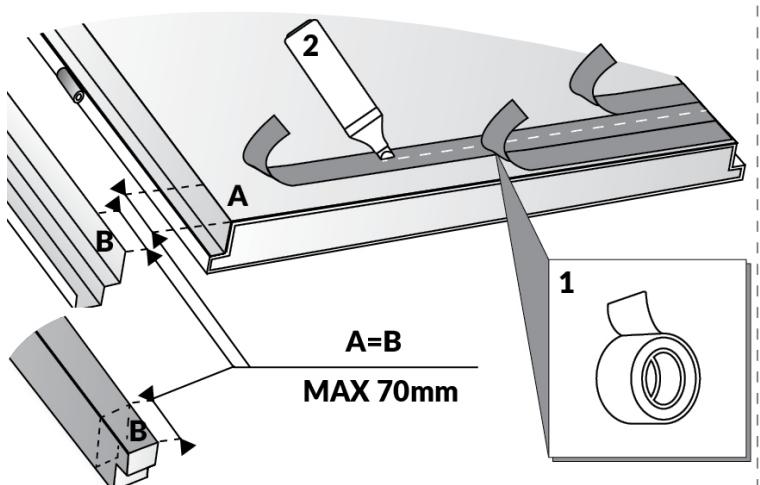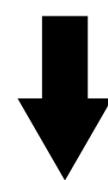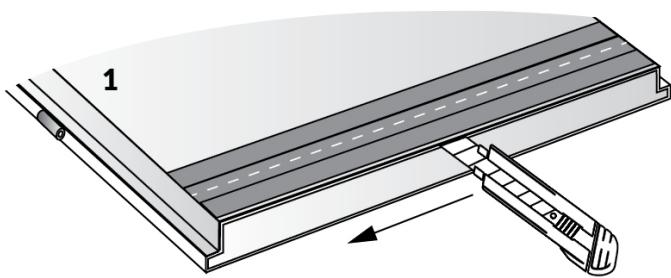

C

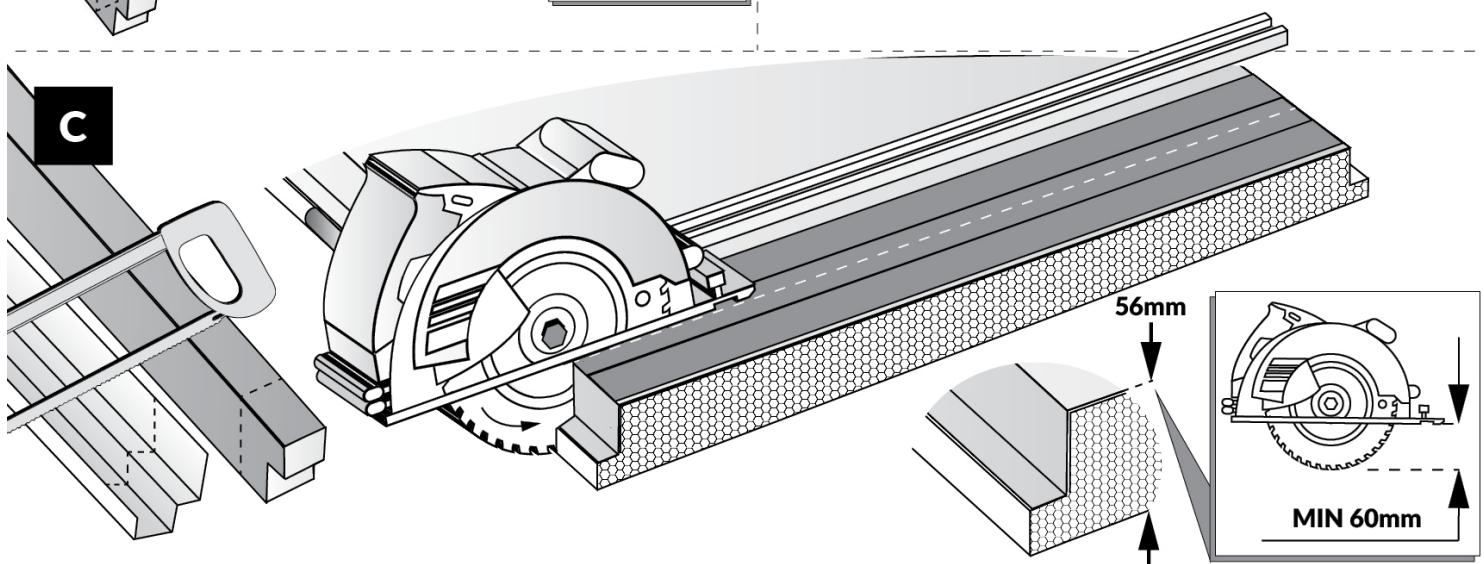

D

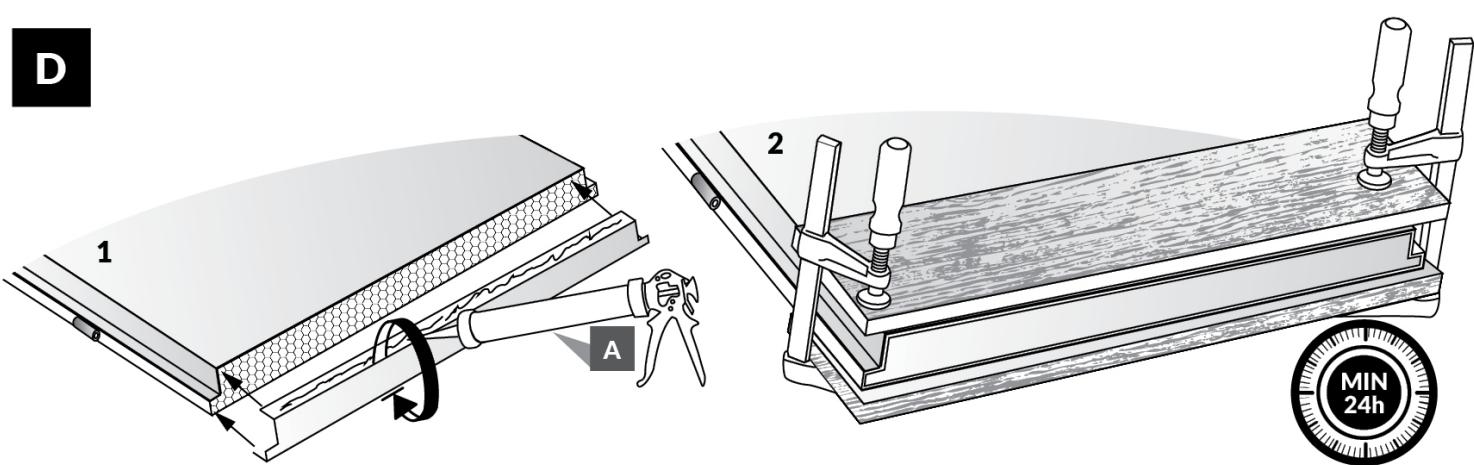

## ⚠ UWAGA

## PRZECZYTAJ PRZED MONTAŻEM

- Przed przystąpieniem do montażu należy sprawdzić pasowność skrzydła z ościeżnicą (dopasowanie bolców antywyażeniowych i rygły do otworów), reklamacje zgłoszone po montażu nie będą uwzględniane.
- Montaż wykonujemy zgodnie z instrukcją pkt 5.
- Drzwi wejściowe do budynku powinny być montowane jako otwierane na zewnątrz, montaż jako otwierane do środka powoduje utratę właściwości użytkowych dla deklarowanych zasadniczych charakterystyk i skutkuje odrzuceniem ewentualnych reklamacji.
- Do czyszczenia powłok lakierniczych mogą być używane: detergenty domowego użytku rozcieńczone w wodzie (WYKŁUCZONE jest używanie środków zawierających substancje ścierne), środki domowego użytku usuwające tłuste plamy, zawierające alkohol i/lub destylaty nafty, denaturat, benzynę ekstrakcyjną. Zaleca się czyszczenie przy użyciu miękkiej tkaniny, dokładne spłukanie i wytarcie powierzchni.
- W przypadku montażu drzwi na ścianach nasłonecznionych, bezwzględnie należy stosować daszki osłaniające drzwi przed nadmiernym nagrzaniem.
- Warunkiem utrzymania gwarancji na pasowność skrzydła z ościeżnicą jest montaż przez osobę z odpowiednimi kwalifikacjami.
- Należy jak najszybciej usunąć folię ochronną ze skrzydła oraz ościeżnicy (jeżeli ją posiada) aby uniknąć zwulkanizowania się folii z laminatem pod wpływem wysokiej temperatury. Reklamacje zgłoszane z tego powodu nie będą uwzględniane.

## ⚠ PARAMETRY BEZPIECZEŃSTWO

Deklarowane wartości zasadniczych charakterystyk umiejscowione są na etykietach znajdujących się na skrzydle i/lub jego opakowaniu oraz w deklaracji DoP.

W skład drzwi wchodzą następujące komponenty:

- skrzydło drzwiowe T55 lub T55U
- ościeżnica dedykowana dla panela T55 lub T55U
- próg dedykowany z uszczelką

## KLAMKA I WKŁADKA NIE SĄ DOŁĄCZONE

- Wyrób może być użytkowany tylko zgodnie z jego przeznaczeniem.
- Podczas montażu należy używać rękawic ochronnych.
- We wszelkie otwory, miejsca działania elementów ruchomych nie należy wkładać palców.
- W czasie użytkowania drzwi nie należy wkładać kończyn i innych części ciała pomiędzy ościeżnicę a skrzydło.

Produkt nie zawiera substancji niebezpiecznych o których mowa w art. 31 lub w odpowiednim przypadku w art. 33 rozporządzenia (WE) nr 1907/2006.

### 1 Typ - wielkości zamówieniowe (wartości podane w milimetrach)

|   |                    |    |                      |
|---|--------------------|----|----------------------|
| I | Ościeżnica stalowa | II | Ościeżnica drewniana |
|---|--------------------|----|----------------------|

### 2 Przekrój skrzydła drzwiowego

|   |  |   |                              |
|---|--|---|------------------------------|
| A | Stojaki ościeżnicy (stalowy / drewniany) | H | Klej                         |
| B | Klocek drewniany pod zawias              | I | EPS                          |
| C | Płaszcz skrzydła                         | J | Ceownik                      |
| D | Powłoka PVC lub farba podkładowa         | K | Bolec antywyażeniowy         |
| E | Warstwa cynku                            | L | Zakres skracania (max. 70mm) |
| F | Blacha stalowa                           |   |                              |
| G | Warstwa cynku                            |   |                              |

### 3 Przekrój pionowy

|   |   |     |  |
|---|---|-----|--|
| A | Próg ze stali nierdzewnej do drzwi zewnętrznych (opcjonalnie) | D/A | Klej uszczelniający (np. FIX ALL SOUDAL) |
|---|---|-----|--|

### 5 Montaż drzwi

Po zamontowaniu kotew (nie dołączone do zestawu) w stojaku zawiasowym należy założyć skrzydło drzwiowe w celu kontroli pasowności zapadki, zasuwek i zawiasów oraz upewnić się, że skrzydło prawidłowo przylega do ościeżnicy.

## **⚠ NOTE**

## **READ BEFORE INSTALLATION**

- Before starting the installation, check the fitting of the leaf with the frame (matching of the burglar proof pins and locks and to the holes), complaints made after the assembly will not be taken into consideration.
- Installation has to be carried out according to the point 5 of the installation instructions.
- The entrance door of a building should be mounted as open to the outside, installation as opening to the inside causes loss of performance for the declared essential characteristics and results in rejection of any complaints.
- The following may be used for the cleaning of varnish coatings: household detergents diluted in water (the use of abrasives is FORBIDDEN), household detergents removing greasy stains, containing alcohol and/or kerosene distillates, denatured alcohol, petroleum ether. It is recommended to clean with a soft cloth, rinse thoroughly and wipe the surface.
- When installing doors on sunny walls, it is essential to use hoods to protect doors from excessive heating.
- In order to maintain the guarantee on the fitting of the frame with the leaf, the installation must be performed by a qualified person.
- The protective foil should be removed from the leaf and frame as soon as possible in order to prevent the laminate film from becoming vulcanized under high temperature conditions. Complaints made for this reason will not be taken into account.

## **⚠ SAFETY**

## **PARAMETERS**

The declared essential values of the characteristics shall be indicated on the labels on the leaf and/or its packaging and in the DoP declaration (DECLARATION OF PERFORMANCE).

The door consists of the following components:

- door leaf T55 or T55U
- dedicated frame for door leaf T55 or T55U
- Dedicated threshold with a gasket

## **HANDLE AND INSERT ARE NOT INCLUDED**

- The product may only be used for its intended purpose.
- Use protective gloves when installing.
- Do not insert fingers into any openings or places where movable parts operate.
- Do not put limbs or other body parts between the door frame and door leaf during use.

The product does not contain dangerous substances referred to in Article 31 or, where appropriate, Article 33 of Regulation (EC) No 1907/2006.

### **1 Type - Order quantities (values in millimetres)**

**I** Steel frame

**II** Wooden frame

### **2 Door leaf cross section**

|          |   |
|----------|---|
| <b>A</b> | Frame racks<br>(steel/wooden frame)       |
| <b>B</b> | Wooden block to be fitted under the hinge |
| <b>C</b> | Door leaf coating                         |
| <b>D</b> | PVC coating or priming paint              |
| <b>E</b> | Zinc coating                              |
| <b>F</b> | Steel sheet                               |
| <b>G</b> | Zinc coating                              |

|          |                              |
|----------|------------------------------|
| <b>H</b> | Glue                         |
| <b>I</b> | EPS                          |
| <b>J</b> | Channel bar                  |
| <b>K</b> | Burglar proof pin            |
| <b>L</b> | Shortening range (max. 70mm) |

### **3 Vertical cross-section**

**A** Stainless steel threshold for exterior doors

### **4 Recommended manner of shortening of the doors**

**D/A** Gap - filling adhesive (e.g. FIX ALL SOUDAL)

### **5 Door assembly**

After installation of the anchors (not included in the kit) in the hinged rack, the door leaf should be fitted to control the fitting of the lock pawl, slider and hinges and to control the fit of the leaf against the frame.